




# Disassembling Nikon Coolpix 5600 Flash Unit

Learn how to disassemble Nikon Coolpix 5600

Written By: Crista Riedy

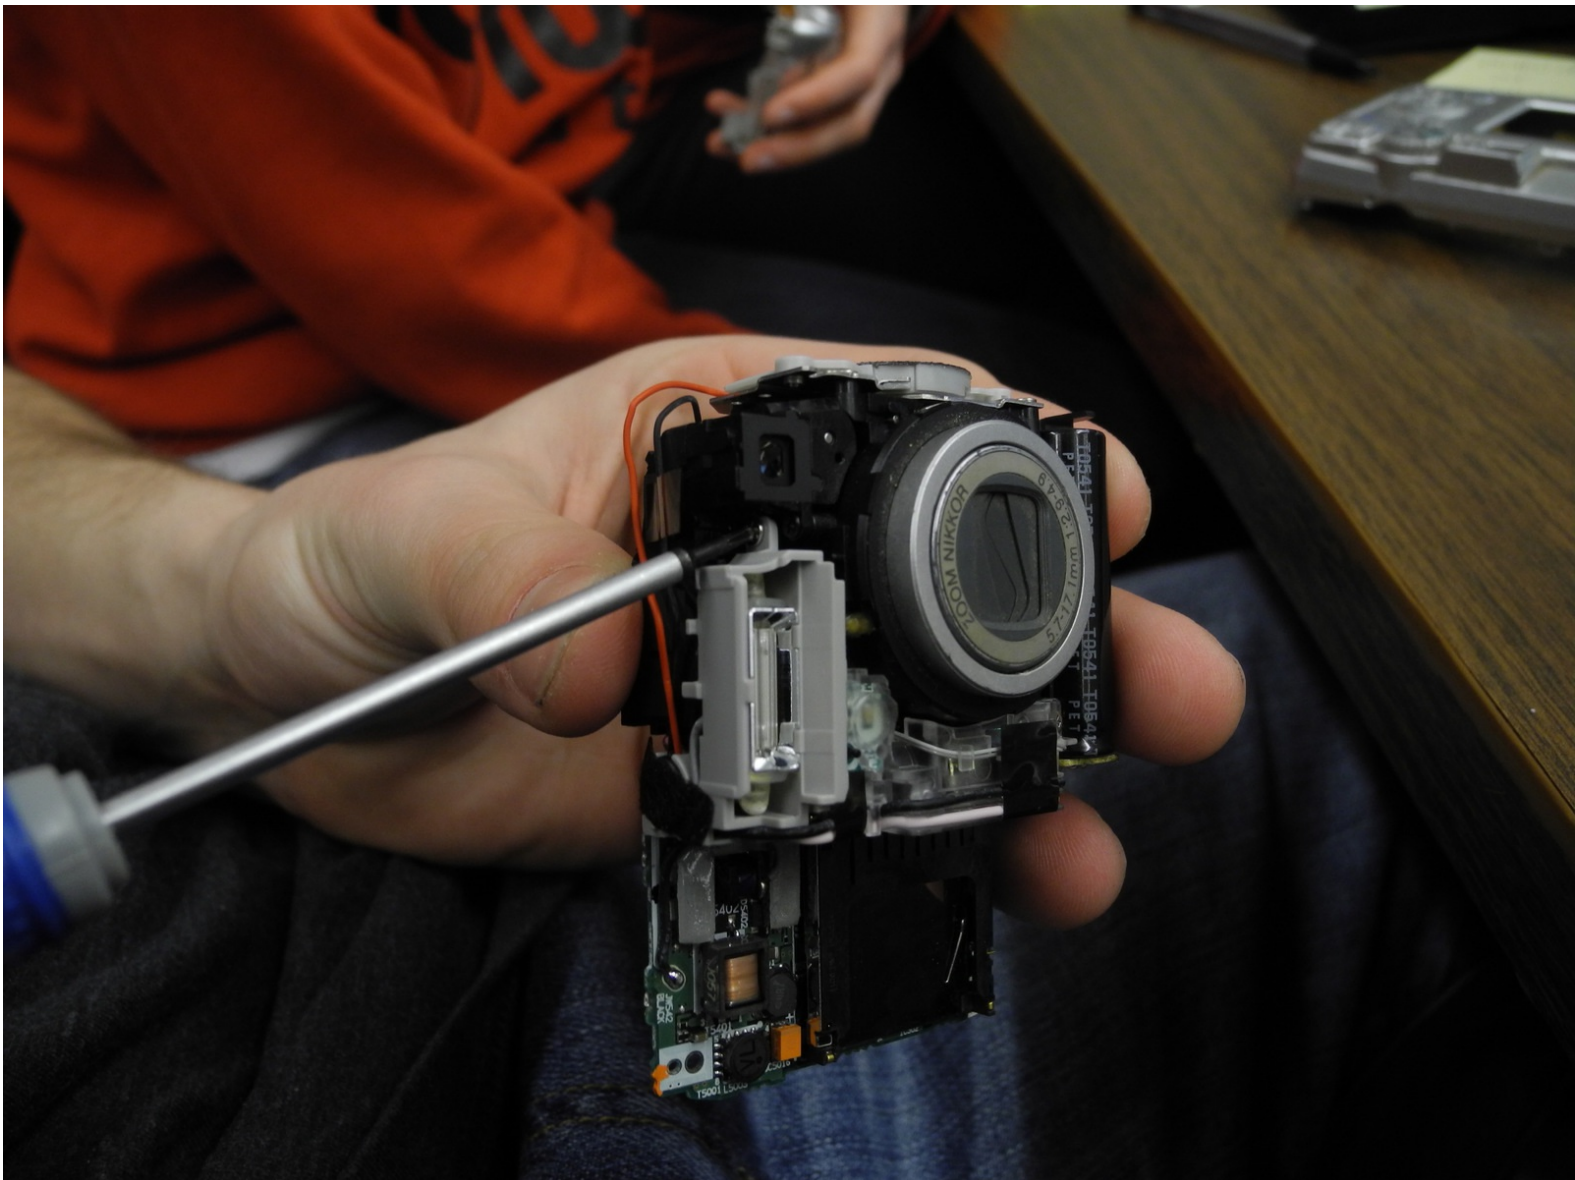




## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Remove Back of camera

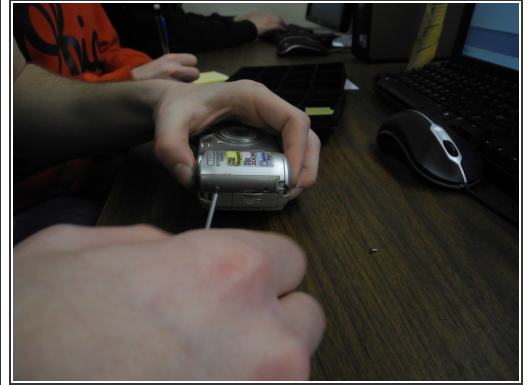

- Remove the screws from the bottom, right, and left side of camera.


## Step 2

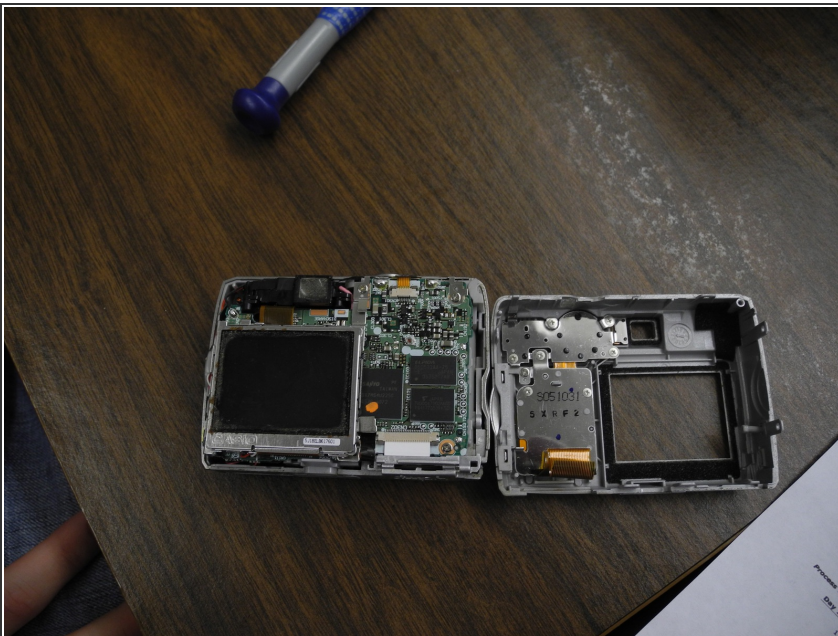

- Remove the back of the camera, may require force.




### Step 3 — Screen Bracket

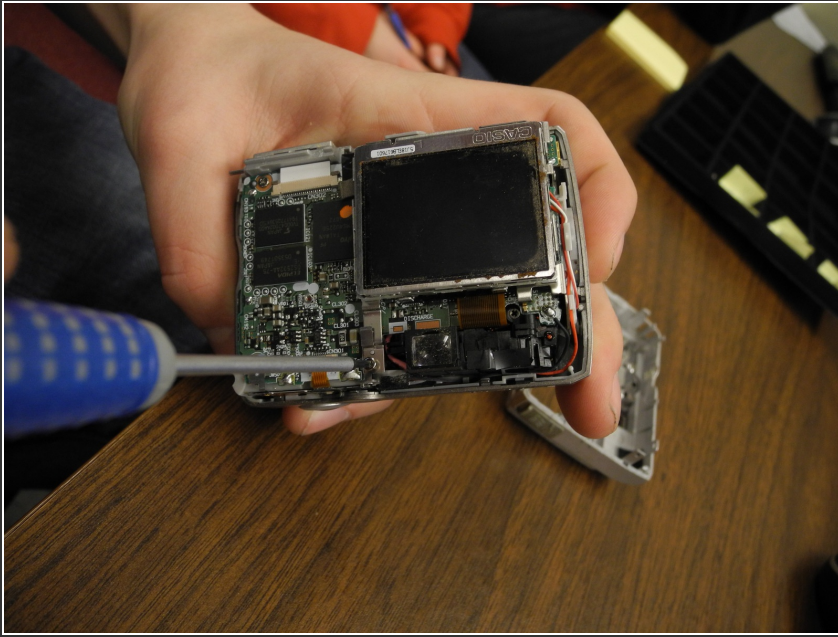


- Unscrew the right metal bracket of the viewing lens

### Step 4 — Remove front of camera

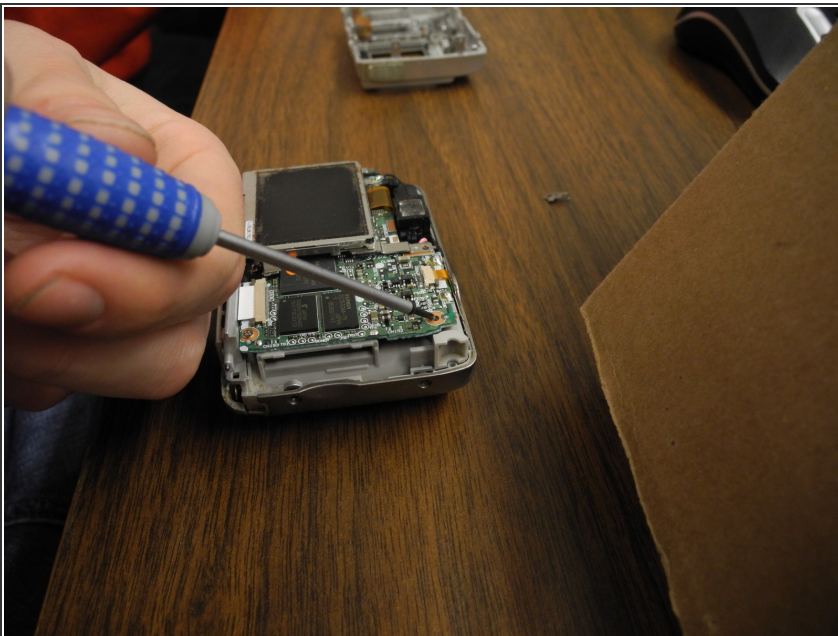

- Unscrew the top right corner screw

## Step 5

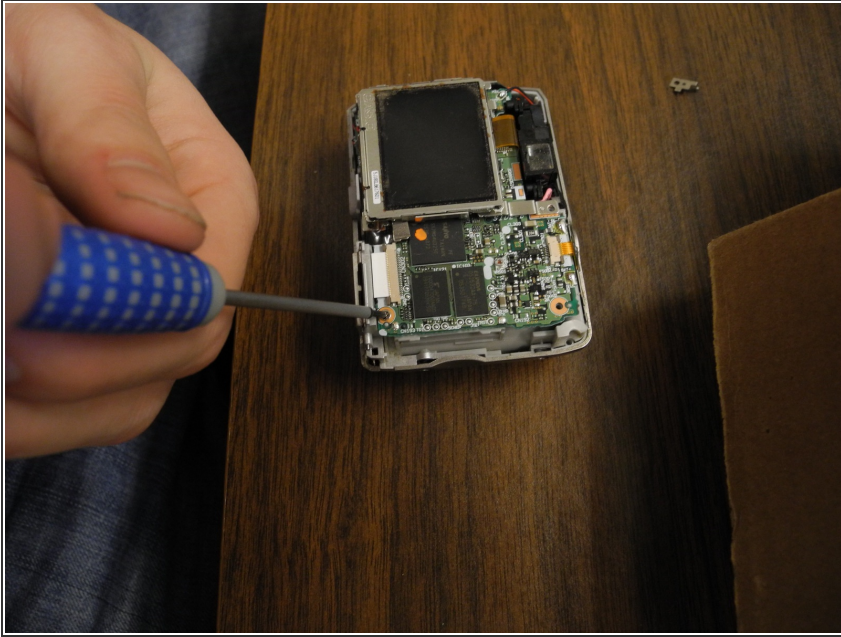

- Unscrew the bottom right corner screw.


## Step 6



- Pull the grey circular facet that sits on the bottom outside of the camera off - may have to use force.




## Step 7

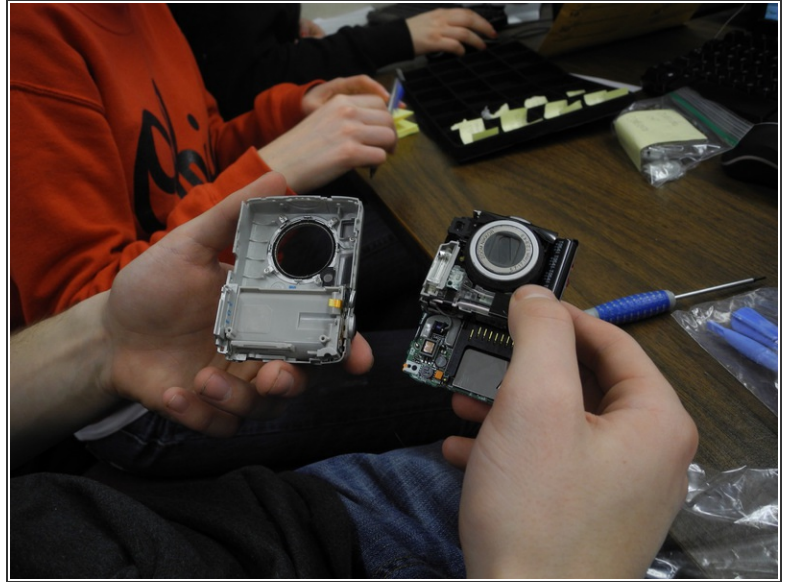

- Pull the front of the camera off of the mother board.

## Step 8 — Disassembling Nikon Coolpix 5600 Flash Unit

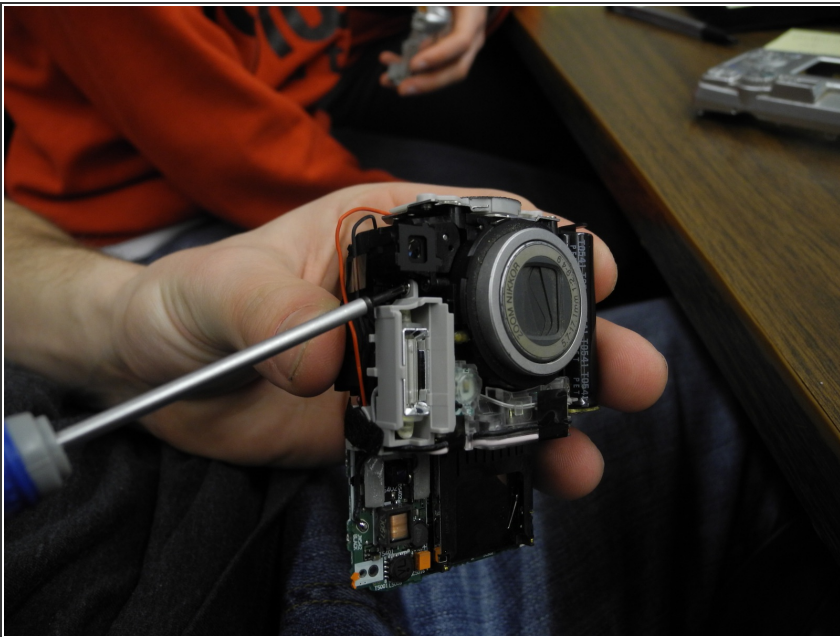


- Unscrew the grey plastic around the screen

## Step 9



- Twist the grey bracket counterclockwise to remove it from the silver LCD bracket.


## Step 10

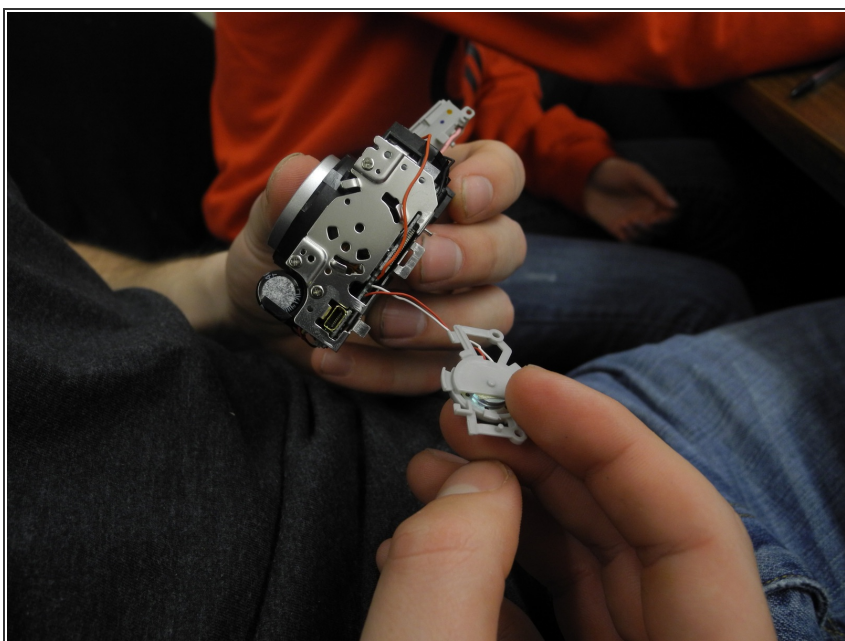

- Maneuver to detach the flash bulb.



## Step 11

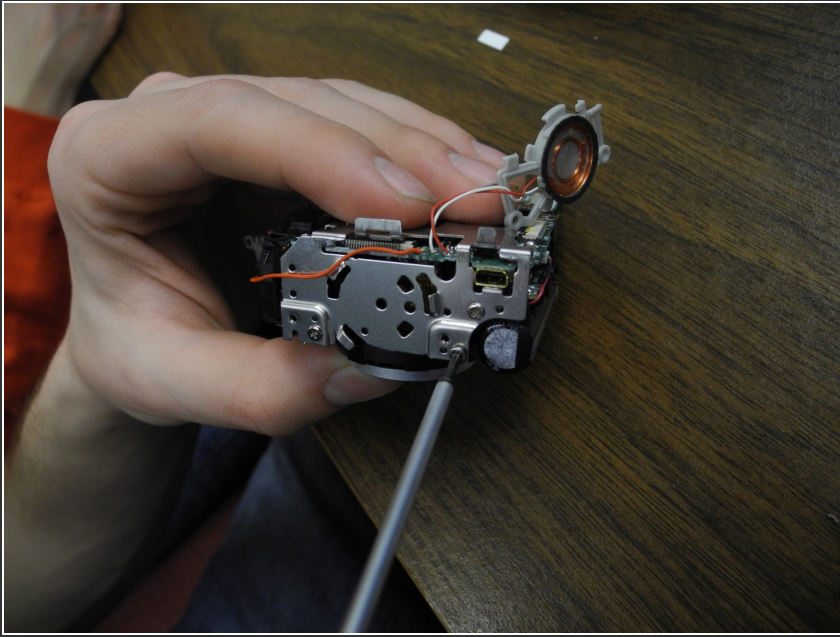

- Unscrew the metal bracket under the lens

## Step 12



- Slide the plastic bracket through the metal bracket.




## Step 13




- Remove the orange cable from the motherboard.

## Step 14

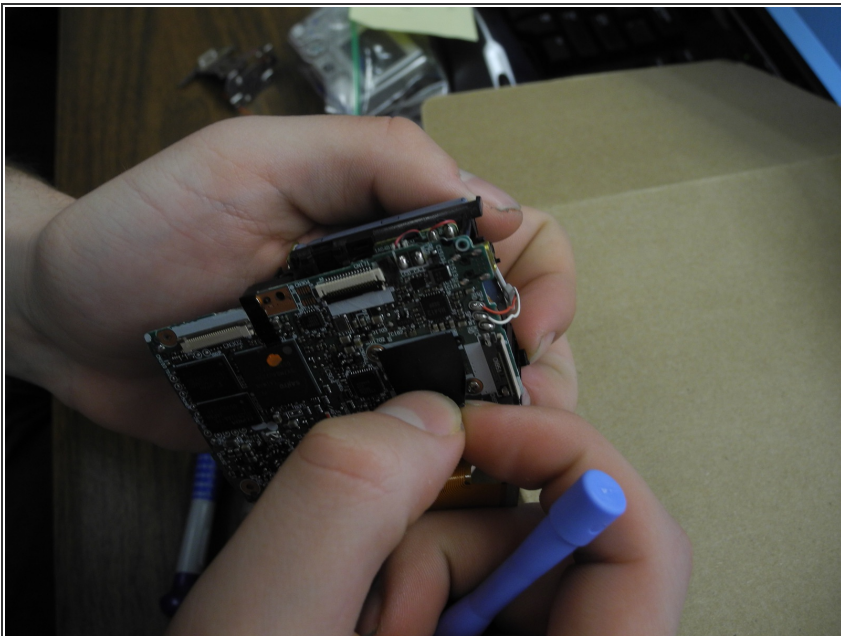

- Pull the black tape off.

## Step 15

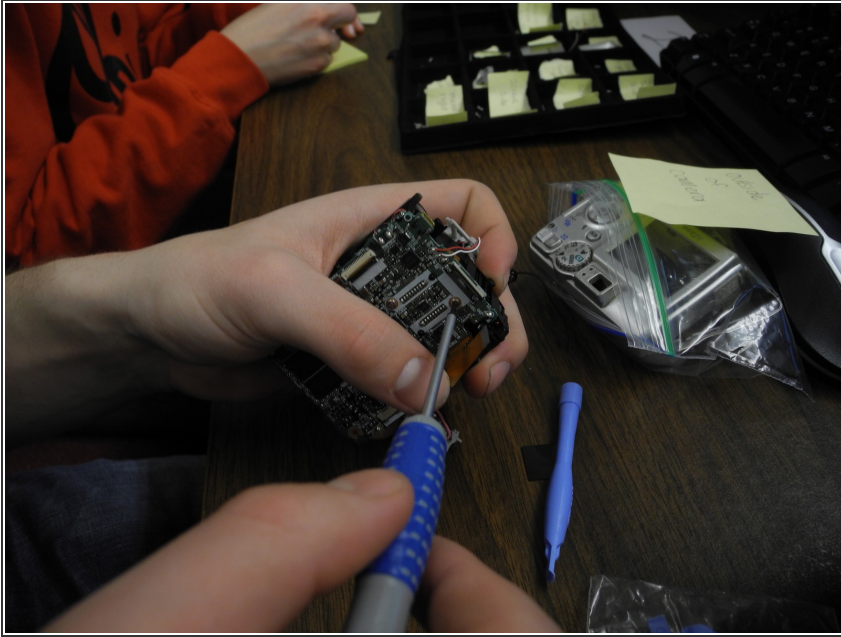

- Unscrew the two screws underneath.

## Step 16



- Remove lens

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:54:37 PM.